

DIGI SET TAP TIMER INSTRUCTION MANUAL

AUTO

Return the Indicator Dot to this point to allow the timer to run automatically.

OFF

Return the Indicator Dot to OFF if you do not want any programs to operate during this time. You will still be able to run a Manual Program if required.

MANUAL MODE

Allows you to set a run time outside of your normal programming. Press the Manual button once to enter manual mode. Use + and - to set a run time. Allow 3 seconds for the timer to start Manual watering.

CHANGE BUTTON

Use this to cycle the Indicator Dot through the various settings on the timer.

+ AND - BUTTONS

Use these to increase or decrease the times based on the function you are changing.

FREQUENCY


Indicates HOW OFTEN you want the timer to run.


This can be set from every 2 minutes to every 7 days using the + and - buttons.

RUN TIME

Use to set HOW LONG you want the water to flow through the timer. The Run Time is influenced by the Frequency so will have limited options depending on your previous setting. For example, you cannot have a Run Time of 4 Hours if your FREQUENCY is every 5 minutes.

This can be set from 1 minute to 720 minutes using the + and -

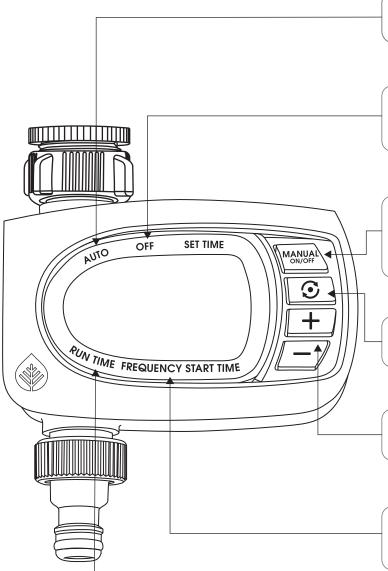

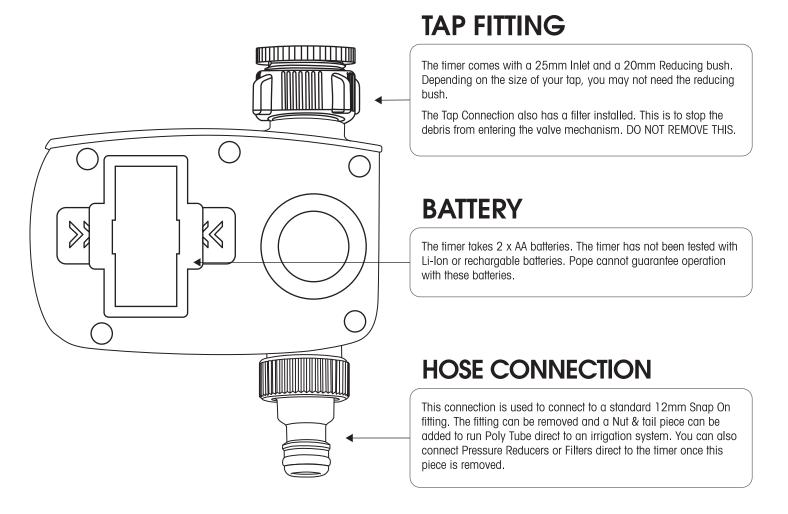

This product is not suitable for use:

- For commercial applications
- If you use bore or unfiltered water
- If you use any kind of pump to draw water
- If the water pressure is unstable

We recommend testing your home water pressure before fitting the Pope Digi Set Tap Timer Recommend Operating Pressure: 100-800kPa

In higher pressure areas, use a pressure reducer from the tap. Product failure where the maximum pressure rating is exceeded will void all warranties.





Pope® is a Registered Trademark of **Toro Australia Pty Ltd**53 Howards Road, Beverley SA 5009 info.au@toro.com I 1300 134 880 **www.popeproducts.com.au**