


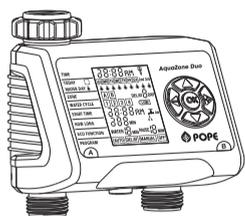

1010377

## AquaZone Duo Water Timer

With the AquaZone Duo Water Timer, you can program up to four automatic watering cycles for each of its two zones. An Eco Function helps reduce wasteful water run off, and watering can be suspended when rain is forecast



### Battery Installation

Pull out the battery holder from the back of the timer and insert two (2) AA Alkaline batteries, making sure that the orientation is as shown on the diagram in the holder. Re-insert the battery holder.

Replace the batteries when the battery status is **LOW**.  
Do not use rechargeable batteries.

### Setting the Time

Use the **◀** and **▶** buttons to set the correct time. Press **OK** to confirm.

Hint - hold the button down to increase the scrolling speed.

The factory default clock setting is for 12-hour time.  
To change to 24-hour time, press and hold **OK** for 10 seconds.  
To return to 12-hour time, press and hold **OK** for 10 seconds.

### Setting the Day

Use the **◀** and **▶** buttons to move the **□** indicator to the current day of the week (e.g. **TU** for Tuesday) and press **OK** to confirm.

### Setting the Watering Day

Watering can be programmed to occur on selected days of the week, or at two or three day intervals.

#### 1. Watering on selected days.

Use the **◀** and **▶** buttons to move the flashing water drop **💧** to the desired watering day of the week.

Press **OK** to confirm **💧** or cancel **💧** the watering day of the week.

#### 2. Watering every second or third day

Use the **◀** and **▶** buttons to move the flashing water drop **💧** to the desired past the weekdays to "2nd" or "3rd".

Press **OK** to confirm **💧** or cancel **💧** the selection.

At least one watering day or watering period must be set before moving to the next step.

Press **▼** to move to the next step.

### Setting the Watering Day

#### 1. Select the Zone

Use the **◀** and **▶** buttons to move the **□** indicator to **A** and press **OK** to confirm.

#### 2. Select the Water Cycle

a. Use the **◀** and **▶** buttons to move the **□** indicator to **1** and press **OK** to confirm.

#### b. Set Start Time

Use the **◀** and **▶** buttons to set the required watering start time and press **OK** to confirm.

#### c. Set How Long

Use the **◀** and **▶** buttons to set the required watering duration (up to 240 minutes) and press **OK** to confirm.

#### d. Activate Eco Function

The Eco Function creates pauses in the watering cycle, reducing water run-off by allowing time for the ground to absorb the water.

WATER MIN and PAUSE MIN can be customised for different applications (irrigation or lawn and garden), landform (flat or sloping) and soil density (clay or sand).

Three examples are:

- Irrigation – water 5 minutes, pause 2 minutes
- Flat Lawn – water 4 minutes, pause 1 minute
- Sloping Lawn – water 2 minutes, pause 2 minutes

Once the ECO function has been programmed and activated, it is applied to all the programmed water cycles. If it is not needed, the ECO function may be skipped by leaving WATER MIN set to 0.

#### i. Set up WATER MIN

Use the **◀** and **▶** buttons to set the required WATER MIN duration (up to 19 minutes), then press **OK** to confirm.

#### ii. Set up PAUSE MIN

Use the **◀** and **▶** buttons to set the required PAUSE MIN duration (up to 19 minutes), then press **OK** to confirm.

3. To set up WATER CYCLES 2, 3 and 4 for Zone A, repeat Programming steps 2a to 2d

4. To set up WATER CYCLES 1, 2, 3 and 4 for ZONE B, repeat Programming steps 1 to 3.

### Activate Programming

1. Use the **◀** and **▶** buttons to move the **□** indicator to **AUTO** and press **OK** to confirm.

### Rain Delay

If rain is forecast, you can suspend the auto program for up to 6 days from the time you program the delay.

1. Use the **◀** and **▶** buttons to move the **□** indicator to **AUTO** and press **OK** to confirm.

2. Use the **◀** and **▶** buttons to set the number of days of delay required, and press **OK** twice, to confirm.

### Manual Watering

To water manually at any time, regardless of the programmed auto sequence:

1. Use the **◀** and **▶** buttons to move the **□** indicator to **MANUAL** and press **OK** to confirm.

2. Select the Zone using the **◀** and **▶** buttons to move the **□** indicator to **A** or **B** and press **OK** to confirm.

3. Set **How Long** by using the **◀** and **▶** buttons to set the required watering duration and press **OK** to confirm.

4. If required, activate Eco Function, as in Programming step 2d. If not required, leave the WATER MIN time set to 0.

5. Repeat steps 2 to 4 for the other zone, if required.

6. Press **OK** twice to confirm and start watering. The display alternately shows Zone A and its remaining watering time, and Zone B and its remaining watering time, changing each 5 seconds.

### Disabling the Program

To suspend automatic watering for an extended period, use the **◀** and **▶** buttons to move the **□** indicator to **OFF** and press **OK** to confirm.

### Installation

1. Attach the timer to the tap and hoses.

2. Turn on the tap and leave it on. Once the watering programs are activated, the timer will control the water flow, as programmed.

The timer can be programmed before installation

### Care and Maintenance

1. For outdoor use only.

2. Maximum operating water pressure: 800kPa.

3. Operating water temperature range: 0°C to 38°C.

4. To store the timer when not in use:

a. Turn off the tap and remove the timer

b. Set the timer to Manual to open the valve and empty out all of the water

c. Remove the batteries

d. Dry the timer and store in a dry place.