










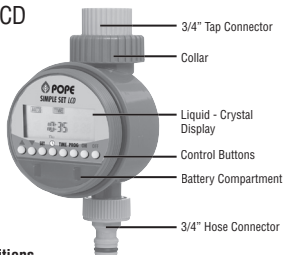

Pope® Simple Set-LCD Automatic Tap Timer



Control Key Definitions

-  Or  Advance or reverse key
(eg setting hours, minutes, programs etc)
-  — Display current time
-  — Confirm input data
-  — Set current time and day
-  — Set Watering Program (1 – 16)
or review watering program data
-   (Together) Erase all
-  — Manual open key
-  — Manual close key

HOW TO INSTALL

- Install 2 new AAA ALKALINE Batteries in the battery compartment (Using old batteries will decrease the overall operational time of the timer). To open battery compartment, squeeze levers together.
- Set the current time and day, and programs before installation (see operating instructions).
- Fit the 3/4" tap connector or the included 1" adaptor to your garden tap. If using the 1" tap adaptor, attach directly to the tap.
- Loosen the collar until the fitted 3/4" tap connector is loose. Then holding the timer steady with one hand, fit to the tap.
- Hand tighten the collar until secure. **Do not over tighten.**



Operating Instructions

SET CURRENT TIME AND DAY

(The Pope Simple Set -LCD Automatic Tap Timer uses a 24 hour clock)

Set hour:

1. Press 

2. Press  or  to set hour.

The hour will flash
Adjustment range: 0 – 23

Press  when
correct.



Set minutes:

3. Press  or 

The minute range will flash
Adjustment range: 0 – 59

Press  when
correct.



Set day:

 
4. Press  or 

The weekday selection will flash
Sunday, (Su) Monday (Mo), etc

Press  when correct.



5. The AUTO display comes on.



SET WATERING PROGRAM

1. Press **PROG**



2. Press **▲** or **▼**

Choose the desired program. Adjustment range: 1 – 16

Press **SET** to confirm the selected program. START TIME hour will flash

SELECT START TIME

3. Press **▲** or **▼**



Choose the hour to START watering
Adjustment range 0 – 23 hours

Press **SET** to confirm the START TIME hour. The minute range will flash

4. Press **▲** or **▼**



Choose the minute to START watering
Adjustment range 0 – 59 minutes

Press **SET** to confirm the START TIME minutes. The run time range will flash

5. Press **▲** or **▼**



Choose how many hours run time for the program. Adjustment range 0 – 9

Press **SET** to confirm the hours set for the run time. The minutes will flash

6. Press **▲** or **▼**



Choose how many minutes to run the program. Adjustment Range 0 – 59 minutes

Press **SET** to confirm the minutes set for the run time. The 2nd symbol (for watering days/frequency) will flash

7. Press **▲** or **▼**



Choose between watering days or frequency.
Every 2nd day watering is automatically selected and will flash.

2nd = waters every second day eg Sunday, Tuesday, Thursday and Saturday appears. If correct move to **☼** press **(H)** or press **▼** to change.

3rd = waters every third day eg Sunday, Wednesday, Saturday appears.

If correct move to **☼** press **(H)** or press **▼** to change.

To select watering days

Press **SET** on flashing day to select day,

and **▲** or **▼** to move between days. More than one day can be chosen. When complete move to **☼** and press **(H)**

Repeat steps 2 through 7 for additional programs

To review set programs



1. Press **PROG**

2. Press **▲** or **▼** to review each program.

Press **(L)** to return to the current time

 
MANUAL OPERATION

You can bypass the programs set in your Pope® Simple Set-LCD Automatic Tap Timer by using manual operation.


To Set Manual On (for water flow)

1. Press 

2. Press  or 




RUN TIME hour of watering will flash
Adjustment range 0-9 hours


Press  to confirm the hours set for run time. The minutes of run time will start to flash

3. Press  or 



RUN TIME minutes of watering will flash
Adjustment range 0-59minutes

Press  to start water flow for RUN TIME selected.

4. Press  to stop water flow.

Low battery indicator

When the battery is running low an indicator will appear and the valve will automatically close.



Technical Specifications

Water pressure: Maximum up to 600 kPa.
If operating in a higher water pressure area, use a pressure reducer.

Temperature: Max 60° C
Batteries: 2 x AAA Alkaline

Use with cold water only

Trouble shooting

- Check batteries – if batteries are running low the valve will close automatically
- Ensure that programs have been set correctly and that there is no overlap
- Make sure the tap is turned on

Guarantee

This Pope® product has a 12 month warranty against defects in materials and workmanship when used with mains water supply in normal home garden watering applications.

This product is not suitable for use with water and bore pumps.

The Pope Simple Set – LCD Automatic Tap Timer will operate in pressures up to 600kPa.

Use a pressure reducing device in higher pressure areas. Use of this product under these conditions without a pressure reducer will void the warranty.

Disassembling of this product will also void the warranty

TORO Toro Australia

Pope® is a Registered Trademark of
Toro Australia Pty Limited
53 Howards Road, Beverley SA 5009



SIMPLE SET-LCD *AUTOMATIC TAP TIMER*

Your Pope® Simple Set-LCD Automatic Tap Timer gives you all the convenience of set and forget garden watering with the flexibility of 16 independent start times.



Key features:

- Easy to use
- Simple to install
- Time saving
- Up to 16 different start times
- Tamper and water resistant cover
- Guaranteed for 12 months
- Runs on 2 x AAA alkaline batteries (no wiring required)
- Easy access battery compartment
- Durable body
- Includes tap adaptor, to fit 3/4" and 1" taps